



Quick Start Guide | TNA-303X

System Defaults

Web UI login	root/admin	SSID	tachyon-ptmp
Mode	Station mode	Passphrase	passphrase

Input & Output Power

Input Power	Active PoE (ETH0): 38-57VDC, 0.5A (24W min.)
Output Power	Passive PoE-Out (ETH1) powers another device. Matches input voltage, up to 0.5A (24W). Disabled by default – Enable in Network Settings (web UI)

Manuals & Guides

TNA-303X guides and manuals can be found on the Tachyon Networks Support site, or you can scan the QR code to the right for a link to the operating manual.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: **(1)** This device may not cause harmful interference, and, **(2)** this device must accept any interference received, including interference that may cause undesired operation.



Quick Start Guide | TNA-303X

Device access for initial configuration

1. **Power On & Connect** – Use the supplied PoE adapter to power the device. Connect your laptop via Ethernet to either:
 - The 2.5G data port on the PoE adapter;
 - The ETH1 (1G) port on the device.
2. **Access the Web UI** – Open a browser and log in at either:
 - DHCP-assigned IP (if available);
 - Fallback IP: 192.168.1.1;
 - Alternative local IP: 169.254.1.1 (wired only).Default credentials: root/admin (change upon first login).
3. **Update & Configure** – Install the latest firmware from the support site. Then, go to **Configuration Settings** in the main menu and adjust device settings as needed.
4. **Attach Antenna** (if applicable) – Select the correct antenna under **TNA-303X wireless settings** for proper operation.

For troubleshooting & aiming tips, refer to the full manual via the QR code.

 LED fast blinking: Device is updating modem firmware.